

Default logging destination	Console only
Default level(s) of logging	All (0-7)
Default levels of logging when sending to RAM	0-6 (all but debugging)

Logging Level Keyword	Number
Alerts	1
Critical	2
Debugging	7
Emergencies	0
Errors	3
Informational	6
Notifications	5
Warnings	4

Commands (include prompt)

Send logging levels 0-3 to console	<code>logging console 3</code>
Observe logging from a telnet/ssh session	<code>logging monitor [<level>]</code>
Set the size of the RAM logging storage to 8000 bytes and store logging levels 0-6 there	<code>logging buffered 8000</code> <code>logging buffered 6</code>
View the logging messages stored in RAM	<code>show logging</code>
Send logging levels 0-5 to the syslog server at 10.0.0.0	<code>logging host 10.0.0.1</code> <code>logging trap 5</code>